


Connecting the camcorder to TV

Please follow the below instructions to connect your camcorder and TV via accessory AV cables for real-time display. You can display your video clips and still pictures on your TV, sharing them with your friends and family.

Connecting the camcorder to HDTV

HD TV hereby means the TV built-in component input ports, thus can perform HD (720P) high resolution quality while connected.

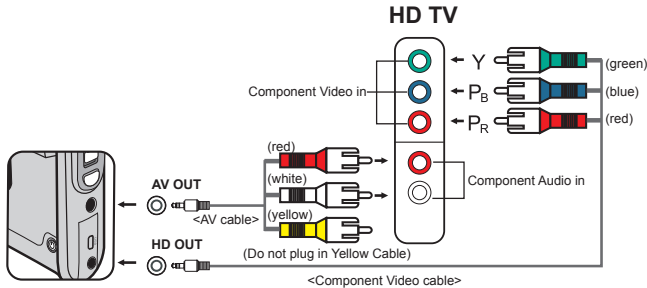


1. Turn on your HD TV.
2. Turn on the Camcorder.
3. Plug one end of the component video cable into the Component IN on the HDTV and the other end into the (HD out) port on Camcorder.
4. Plug one end of the other AV cable into the (AV IN) port on the HDTV and the other end into the (AV out) port on Camcorder.
5. Press the input switch mode on HD TV and select "Component Input".

ⓘ If you record an HD resolution clip while connected to your HD TV, the TV display video resolution will down size to D1 (480P) resolution due to data bit rate, but the recorded file will remain HD (720P) with no change.

Connecting the camcorder to Standard TV

TV = Traditional CRT TV (The TV system is different across countries: USA = NTSC, other countries use PAL)

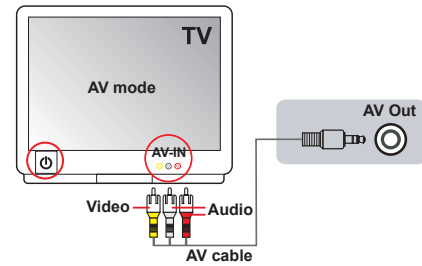

1. Power on the camcorder.
2. Press the **MODE** key to enter the Mode menu.
3. Use the Joystick switch to the **Setting** mode and press **OK** to enter the menu screen.
4. Use the **Joystick** to select the TV-out item, and then press **OK** to confirm.
5. Move the **Joystick** up/down to select NTSC.

ⓘ NTSC system is standard for the USA.

6. When done, press **OK** to confirm the setting.
7. Press the **Shutter** key to return to the preview screen.
8. Connect the audio and video ends of the AV cable (yellow/white/red color) to the TV "AV-IN" jacks.
9. Connect the other end of the AV cable to the "AV out" port on your camcorder.

Playing back your recordings on PC

Installing software

Please notice that the recorded videos are .mov format. So you need some special programs to view the recordings on PC. For first time use, please make sure you have QuickTime 7.0 player on your PC. If not, Please follow the below instructions to install the software first.

Please download the QuickTime 7.0 player from the below website:
<http://www.apple.com/quicktime/download/win.html>

OR

Please install the HD-DV DECODER program on the bundled CD. (* HD-DV DECODER is designed for playing back the .mov files recorded by our camcorder with Windows Media Player.)

Connecting PC and Save files

After the software is properly installed on your PC, please follow below procedures.

1. Turn on the camcorder.
2. Connect the camcorder (with SD card inserted) to your computer with the USB cable.
3. A dialogue window will appear automatically. Please select the item "Open folder to view files" and click "OK".
4. If the dialogue window does not appear automatically, you may double click on "My computer" and open the "Removable Drive".
5. Double-click on the **DCIM** file folder.
6. Double-click on the **100MEDIA** file folder.
7. Copy the files you wish to keep and save them to the desired location on your computer.

Addendum for GO-HD

Ratio Introduction

Due to the sensor capture feature, the LCD preview and ratio of still picture capture will vary depending upon different video resolution settings. The image capture of the camera is set where as video resolutions are different.

Video resolution	Preview	Taking pictures and focusing
HD(1280x720)	16:9 ratio 	4:3 ratio
D1(720x480)	4:3 ratio 	4:3 ratio
CIF(352x288)		

System Requirements

Minimum requirements:

- Microsoft Windows XP SP2 above
- Macintosh 10.3, or above
- Pentium 4, 2.8GHz or above
- Direct X9.0c or above
- 512MB of System RAM (1GB recommended)
- Video card with 128MB of RAM (256MB recommended)
- 4X speed CD ROM or higher
- USB port
- QuickTime 7.0 or above